


Bona Sanding Sequence

Example process for sanding a natural, stained or oiled floor using a full Bona Sanding System:

Natural Floor


Natural, Stained or Oiled Floor

(for any floor requiring the least amount of scratches)

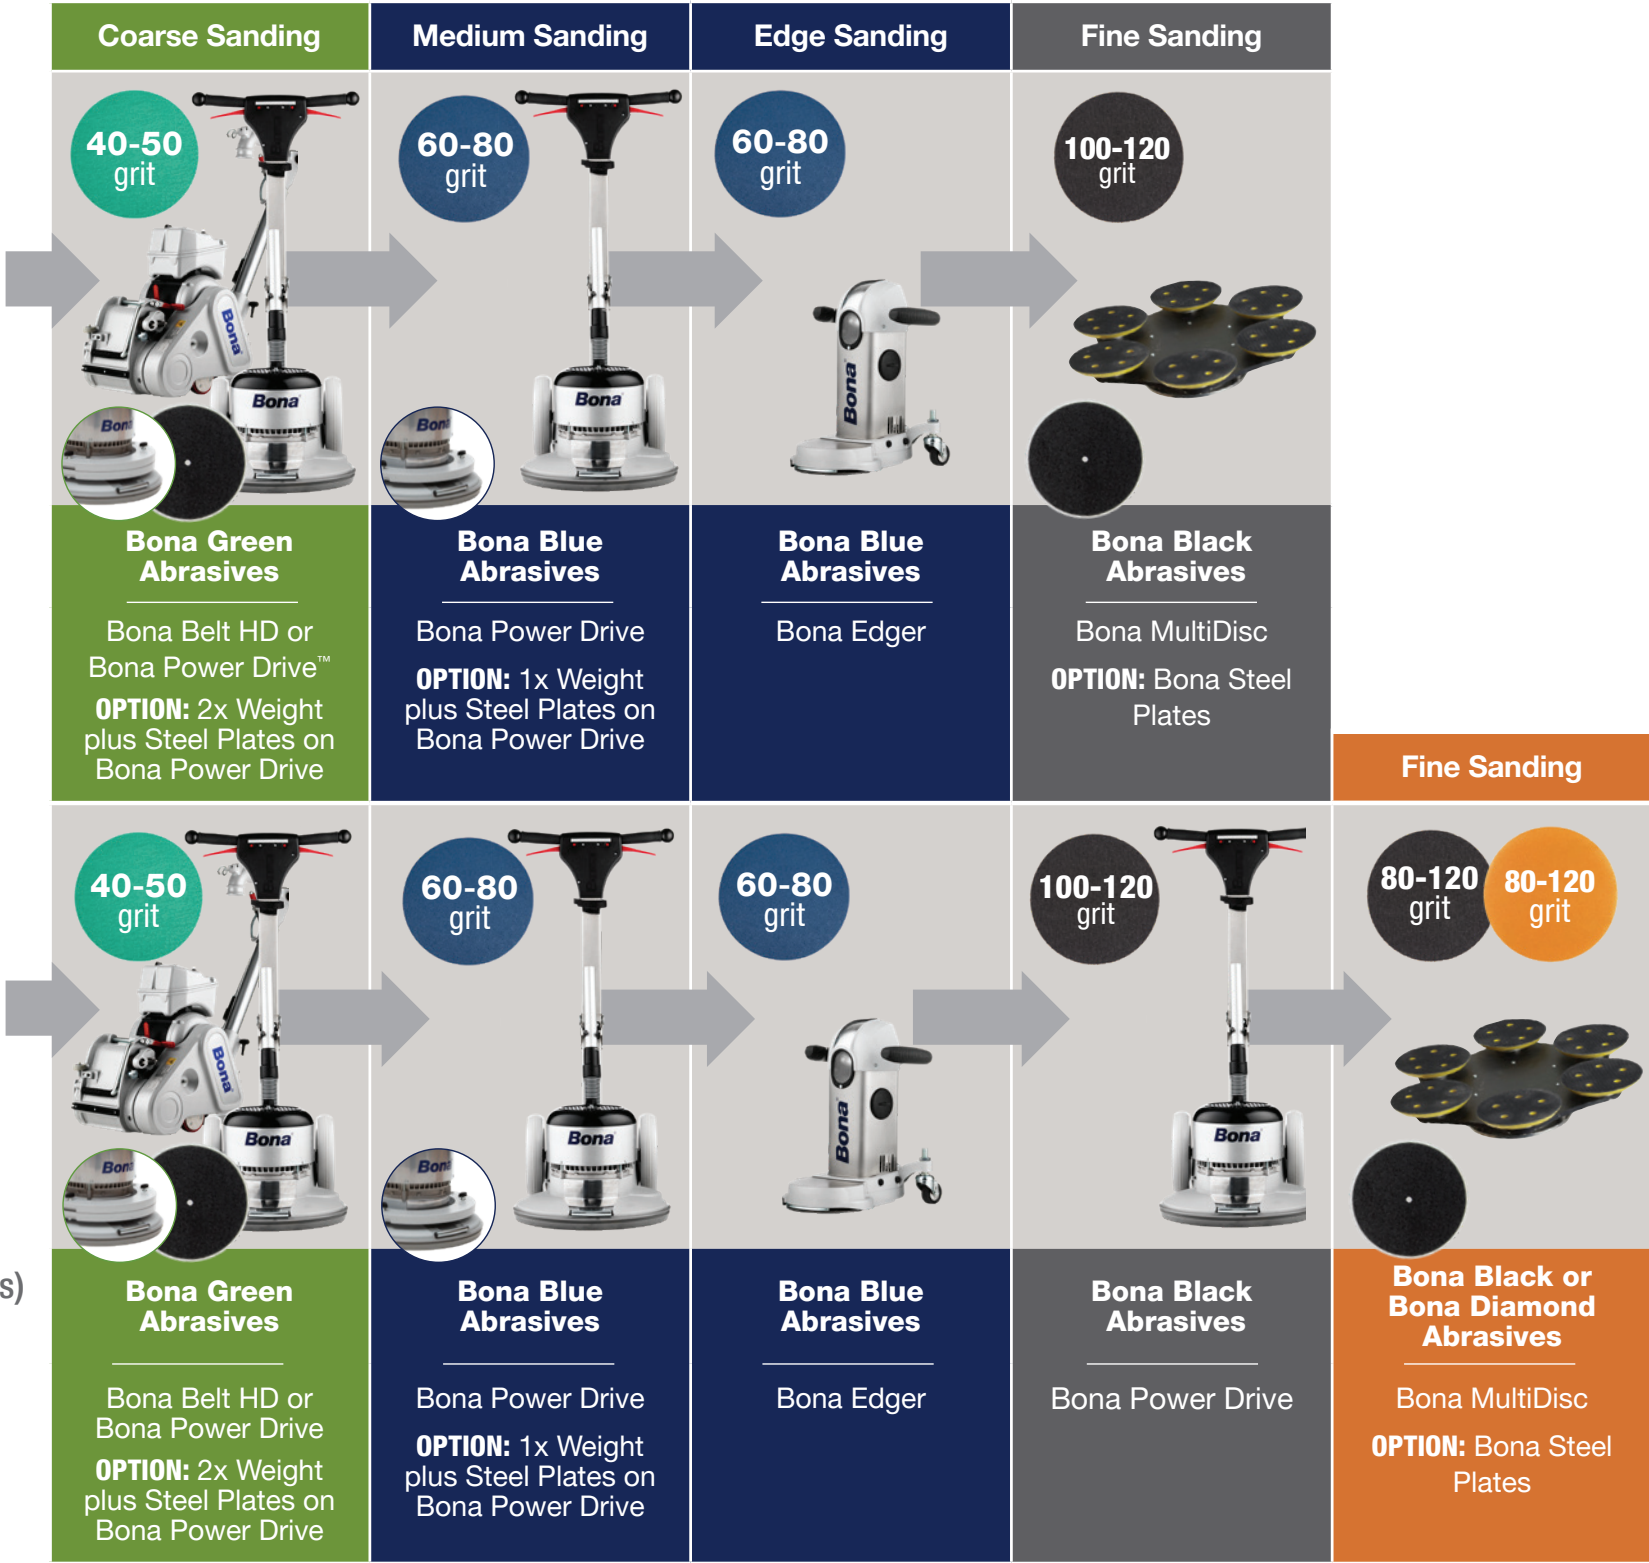

Bona Wire Brush System Sanding Sequence

Example process for wire-brushing a floor using a full Bona Sanding System:

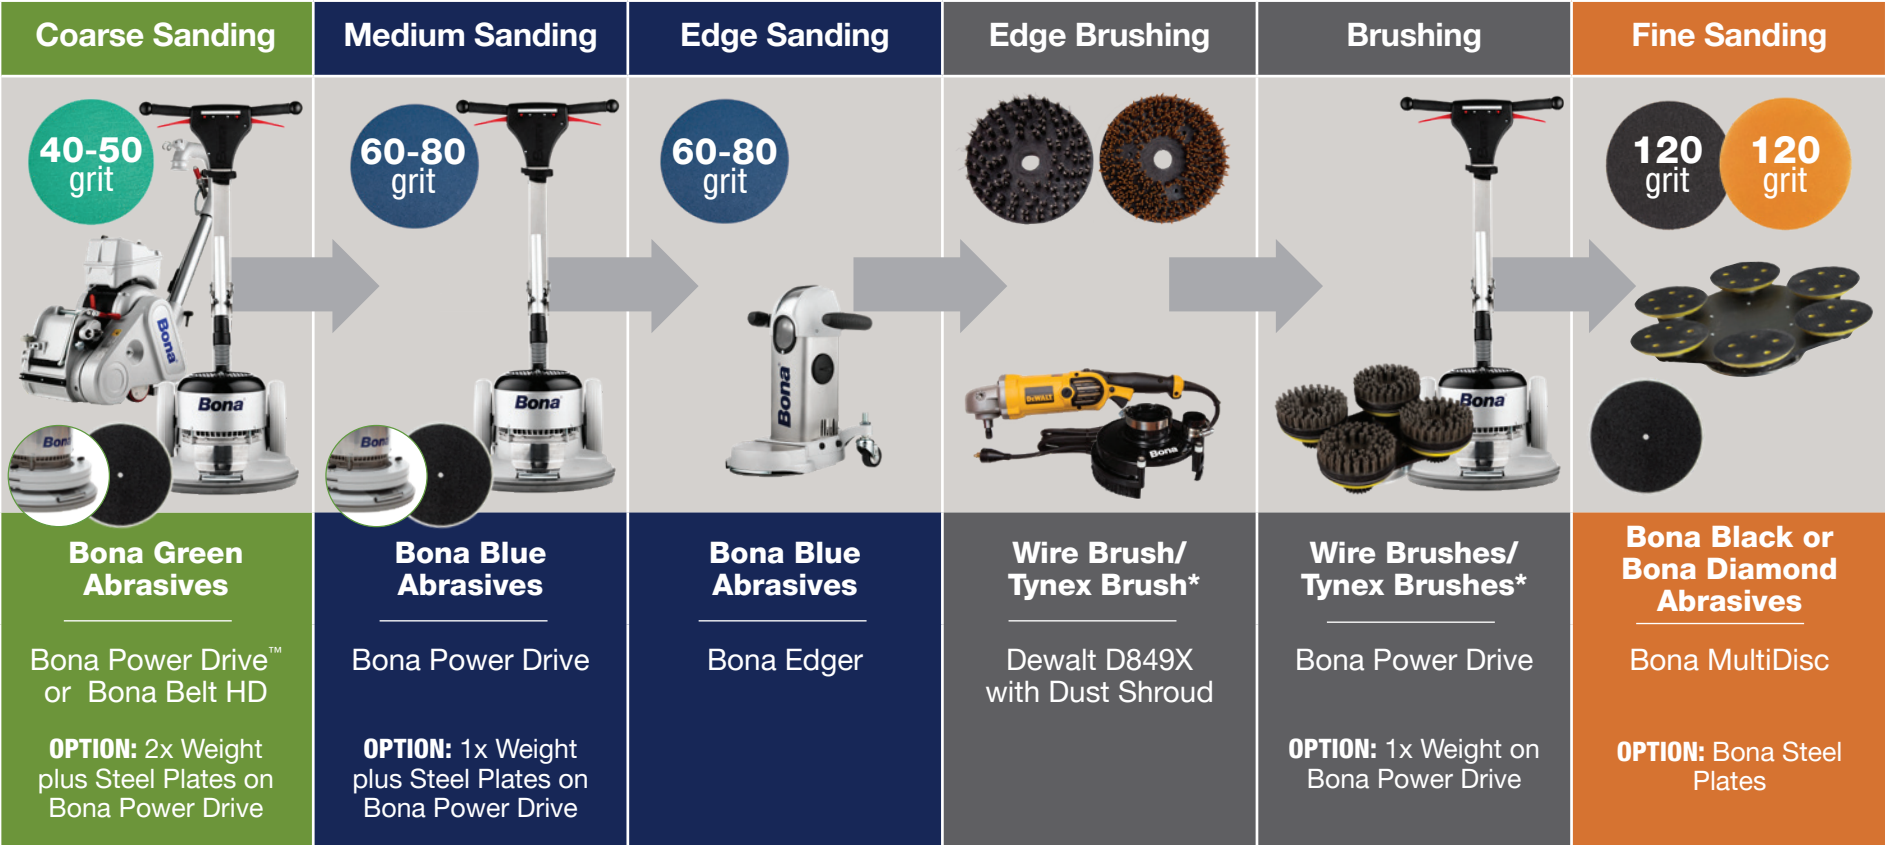

*When a softer brushing effect is desired, use the Tynex Brush after wire-brushing.